

- In addition to routine checks for each use, PPE should regularly undergo a detailed inspection by a competent person. Petzl recommends an inspection every 12 months and after any exceptional event in the life of the product.
 - PPE inspection should be conducted with the manufacturer's Instructions for Use.
- Download the instructions at [PETZL.COM](https://www.petzl.com).



NAJA

1. Known product history

Any PPE showing questionable degradation should be quarantined, pending a detailed inspection.

The user should:

- Provide precise information on the usage conditions.
 - Report any exceptional event regarding their PPE.
- (Examples: fall or fall arrest, use or storage at extreme temperatures, modification outside manufacturer's facilities.)

2. Preliminary observations

Verify the presence and legibility of the serial number and the CE mark.

Warning: the serial number code on our products is evolving. Two types of code will coexist. See below for details on each serial number code.

Code A:

00 000 AA 0000

Year of manufacture
Day of manufacture
Name of Inspector
Incrementation

Code B:



00 A 0000000 000

Year of manufacture
Month of manufacture
Batch number
Incrementation


Verify that the product lifespan has not been exceeded.
Compare with a new product to verify there are no modifications or missing parts.

3. Checking the condition of the strap

- Look for wear and damage due to use (e.g. cuts, fuzziness, signs of chemicals).

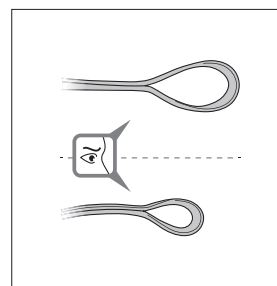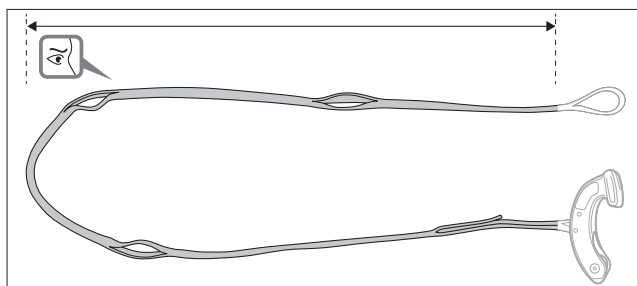


- Check the condition of the safety stitching on both sides. Look for any threads that are loose, worn, or cut.

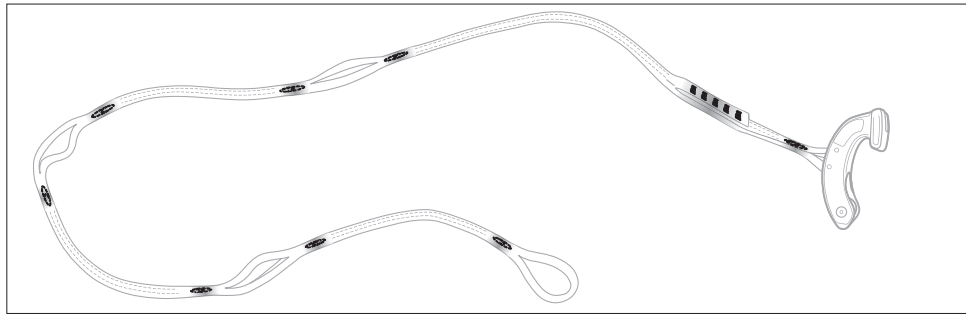


4. Inspecting the frame


- Check the condition of the frame (e.g. deformation, cracks, marks, wear, corrosion).

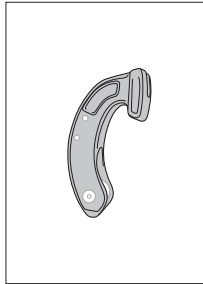


- Check the condition of the rivets (e.g. deformation, cracks, marks, wear, corrosion).

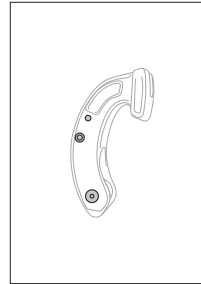


- Check the condition of the sheave (e.g. deformation, cracks, marks, wear, corrosion, absence of foreign bodies). Verify that the sheave turns freely in both directions.

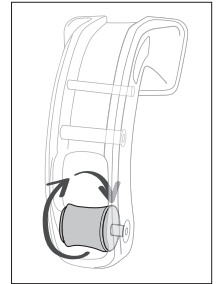

- Check the condition of the strap connection point. Move the strap to inspect the hidden areas.

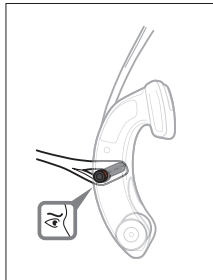


- Check the tightening torque of the screw using a torque wrench (the tightening torque is specified in the Instructions for Use of the equipment).

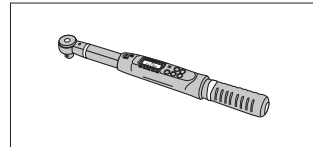


- Remove the screw to check the equipment separately, only if the condition of the equipment requires it. In this case, see the mounting instructions indicated in the Instructions for Use.

5. Inspecting the retrieval sling

- Look for wear and damage due to use (e.g. cuts, fuzziness, signs of chemicals).

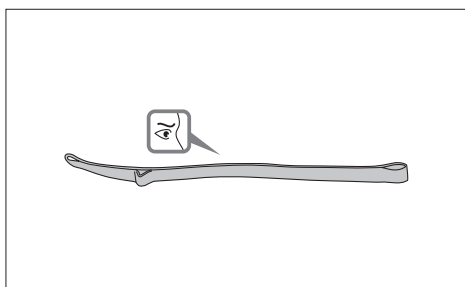

- Check the condition and function of the MINO retrieval accessory-carabiner and of its positioning bar.

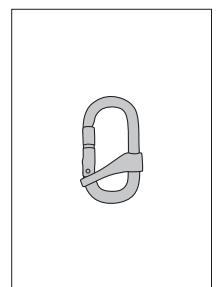

- Check the condition of the safety stitching on both sides. Look for any threads that are loose, worn, or cut.

